




Prepping the Trainer

Prepping the trainer

- Hook to electrical power

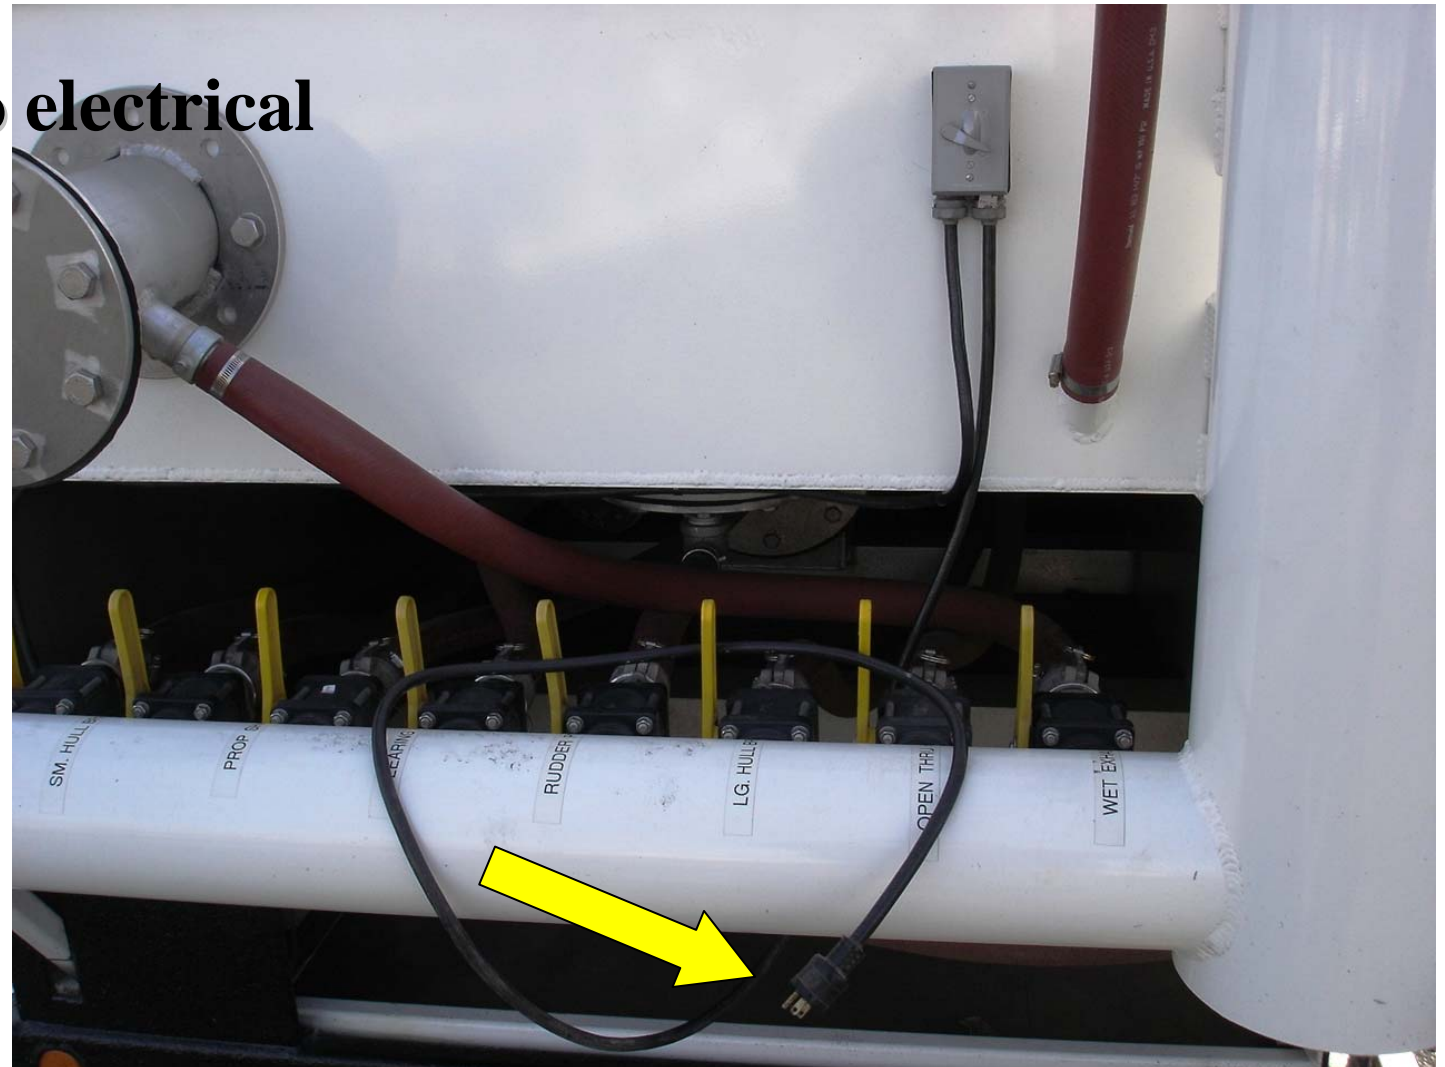

Prepping the trainer

- **Connect water to the manifold/tank assembly**




Prepping the trainer

- **Open inlet valve**




Filling the trainer with water

- **Graphical depiction of the system**

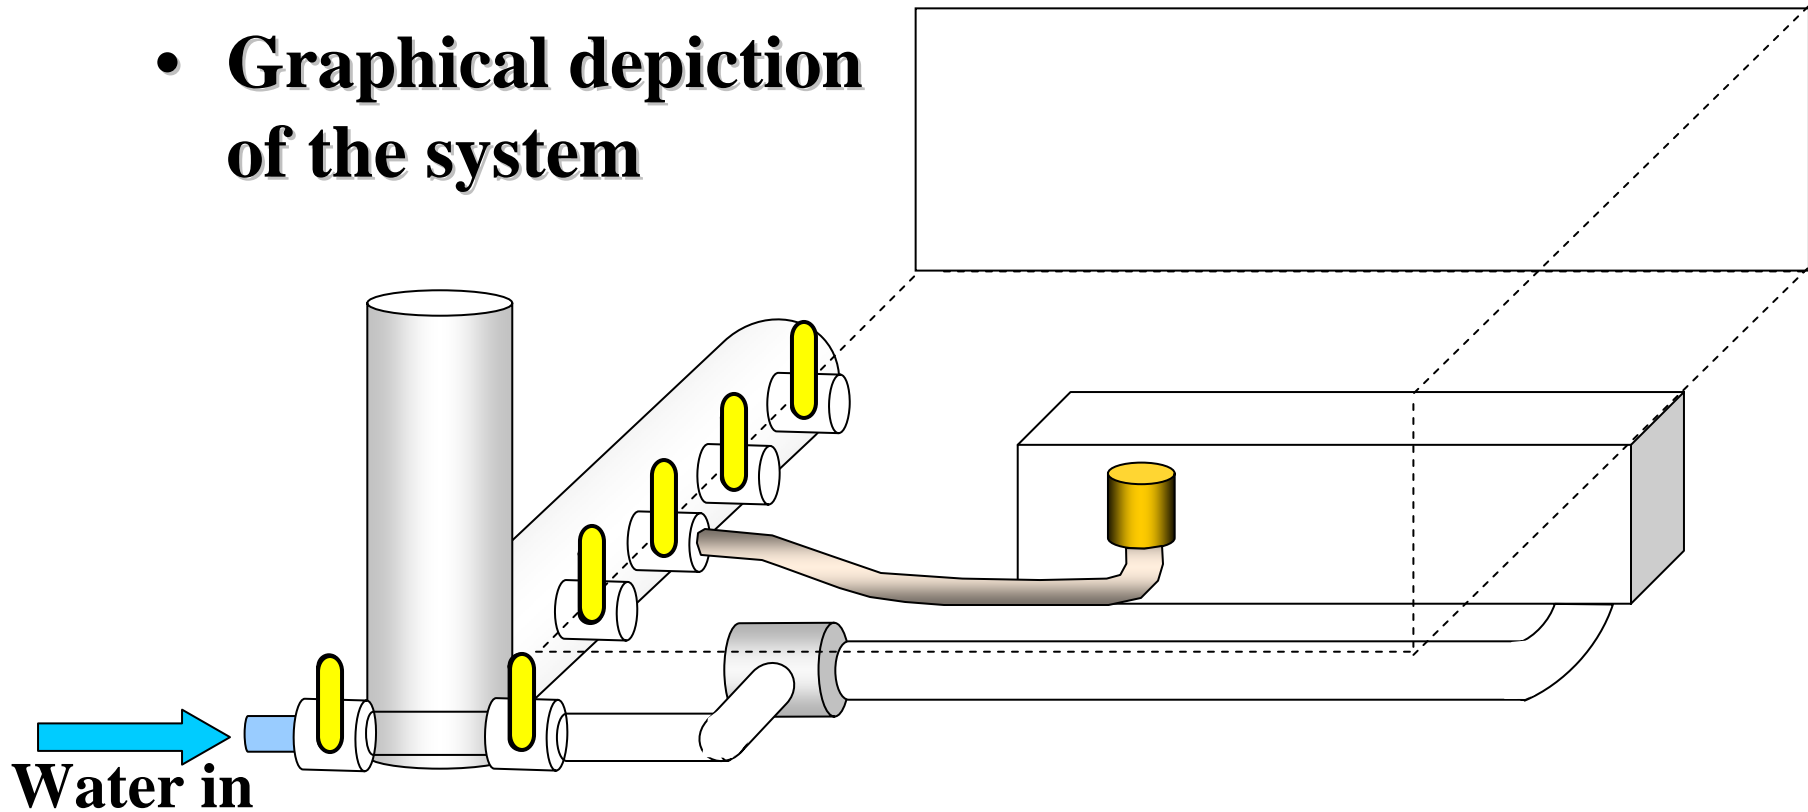


Filling the trainer with water

- **Open inlet valve**

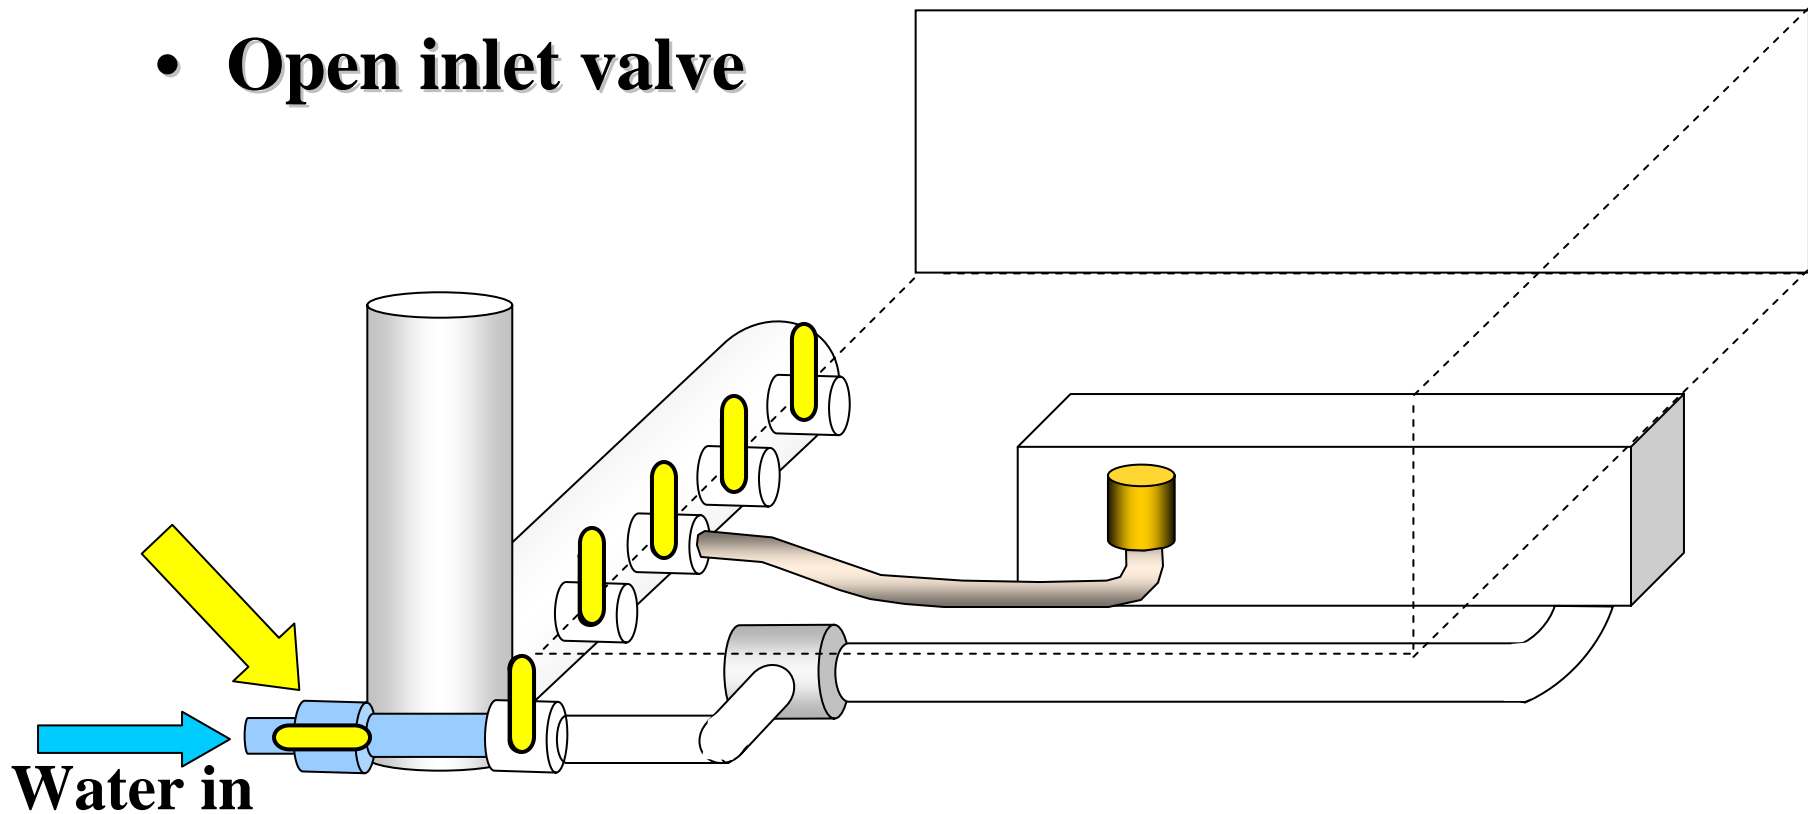


Filling the trainer with water

- **Open pump inlet valve**

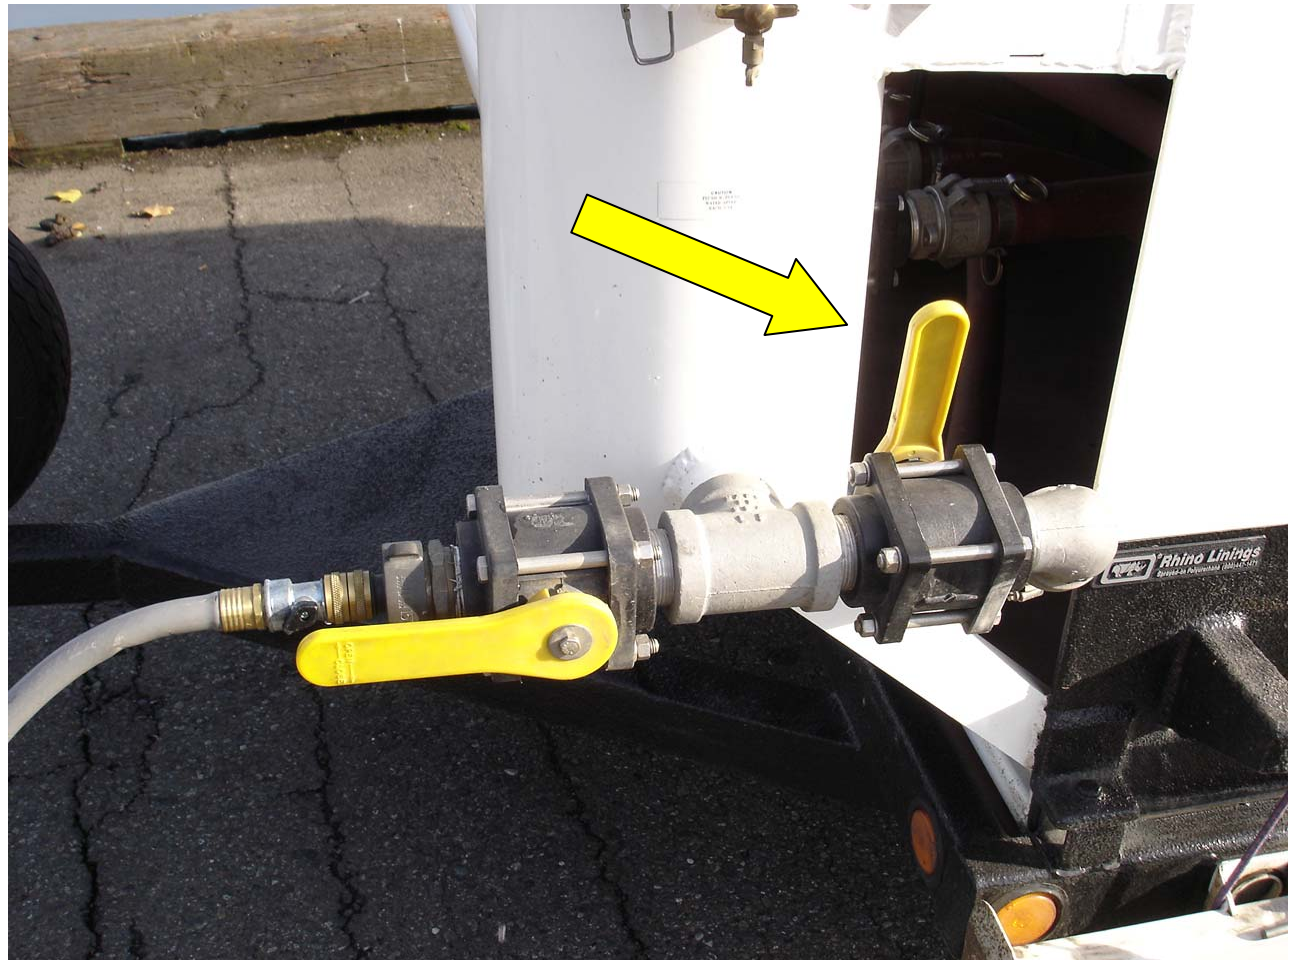


Filling the trainer with water

- **Pump**

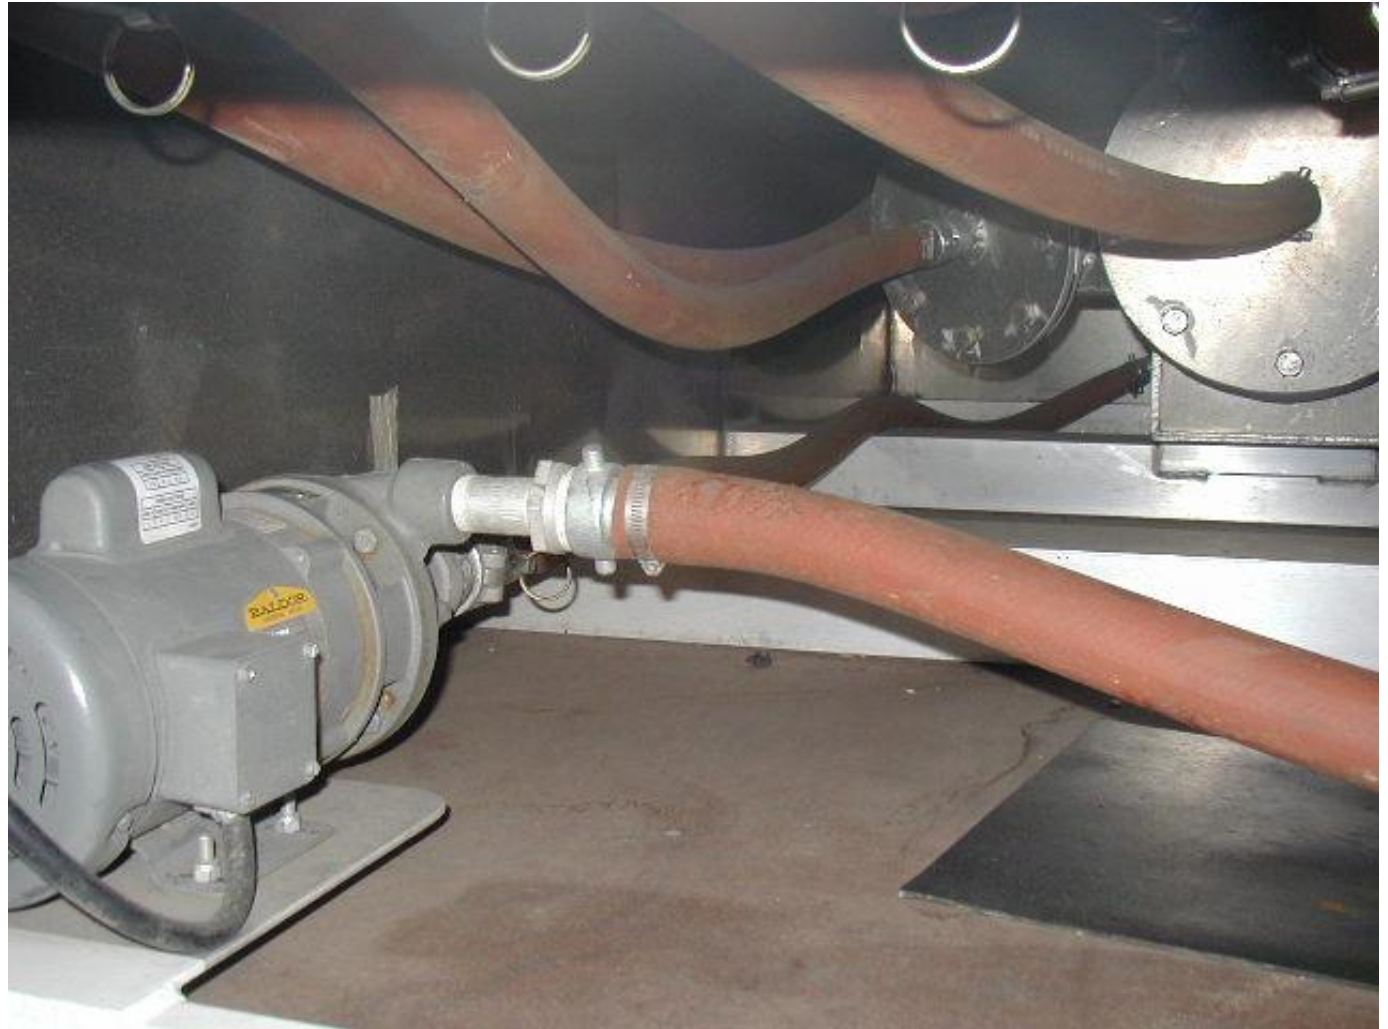


Filling the trainer with water


- **Fill the drain tank**

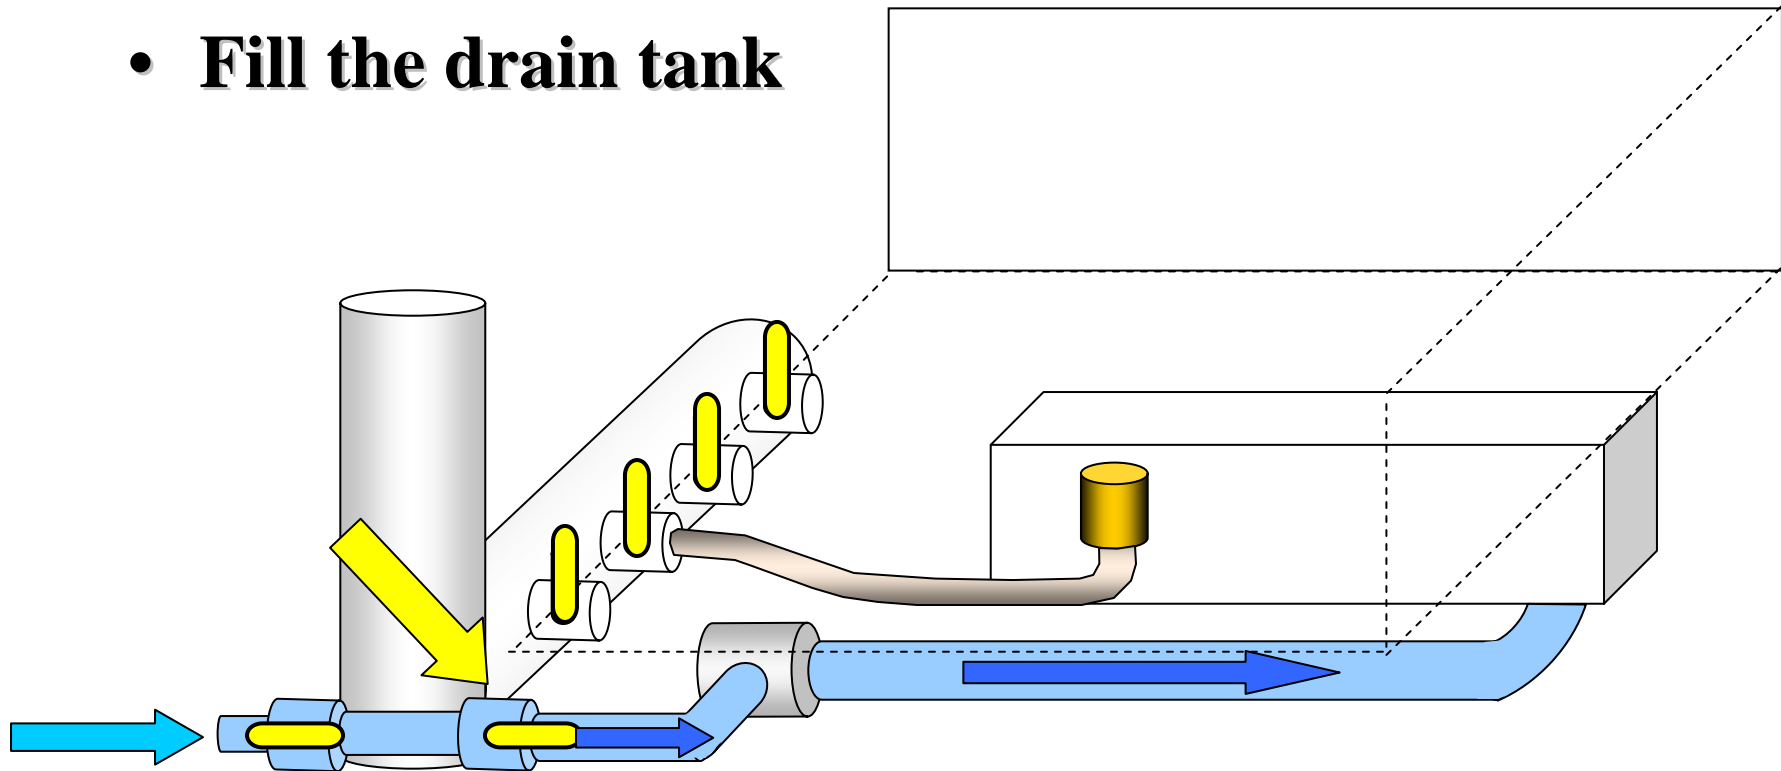

Filling the trainer with water

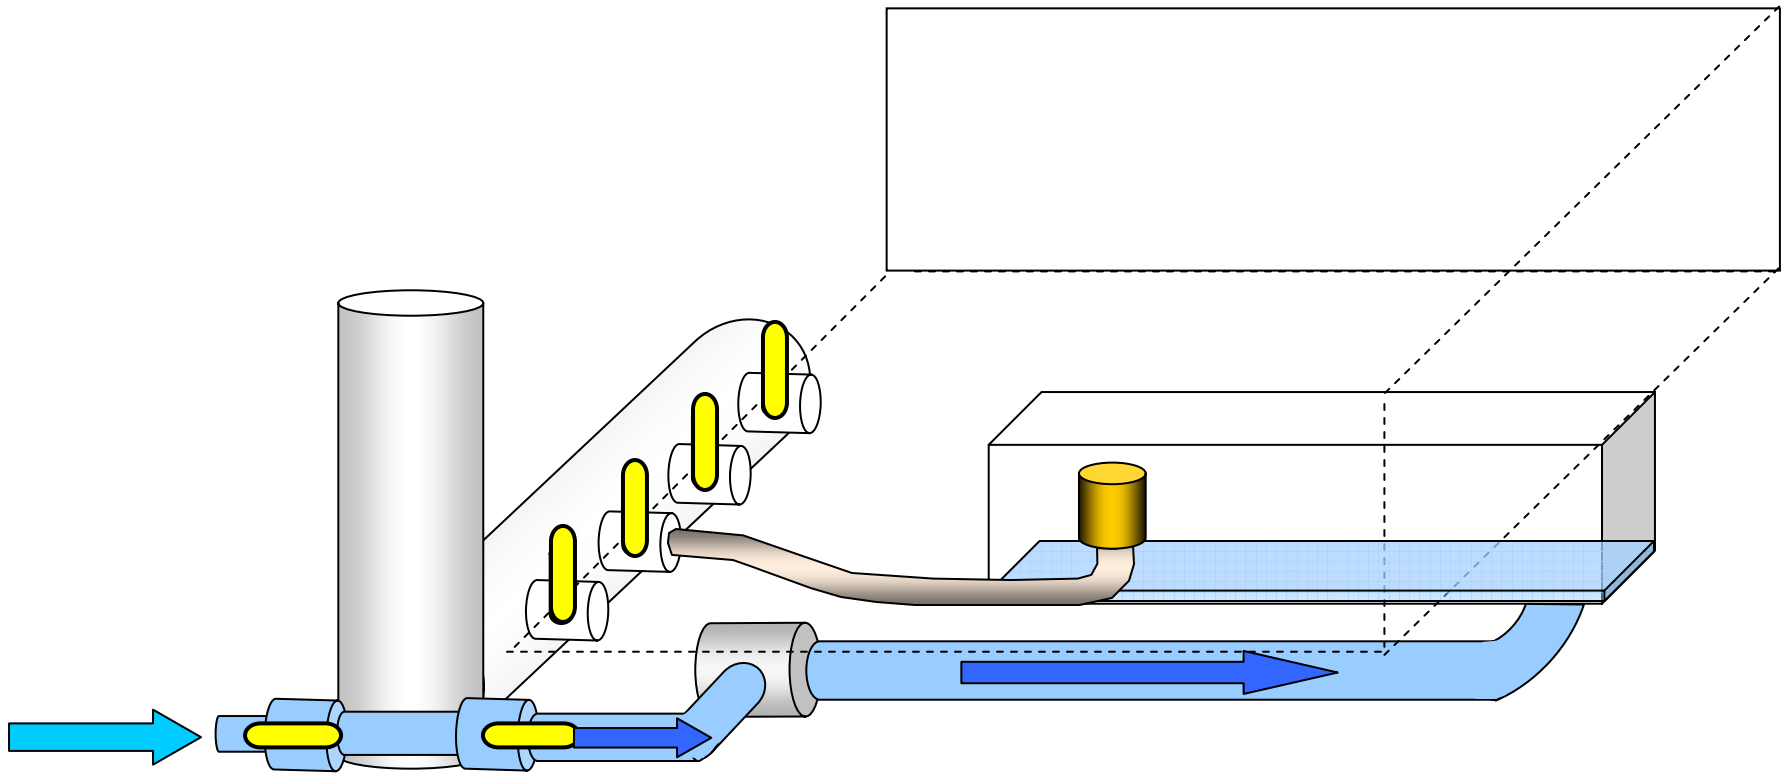


Filling the trainer with water

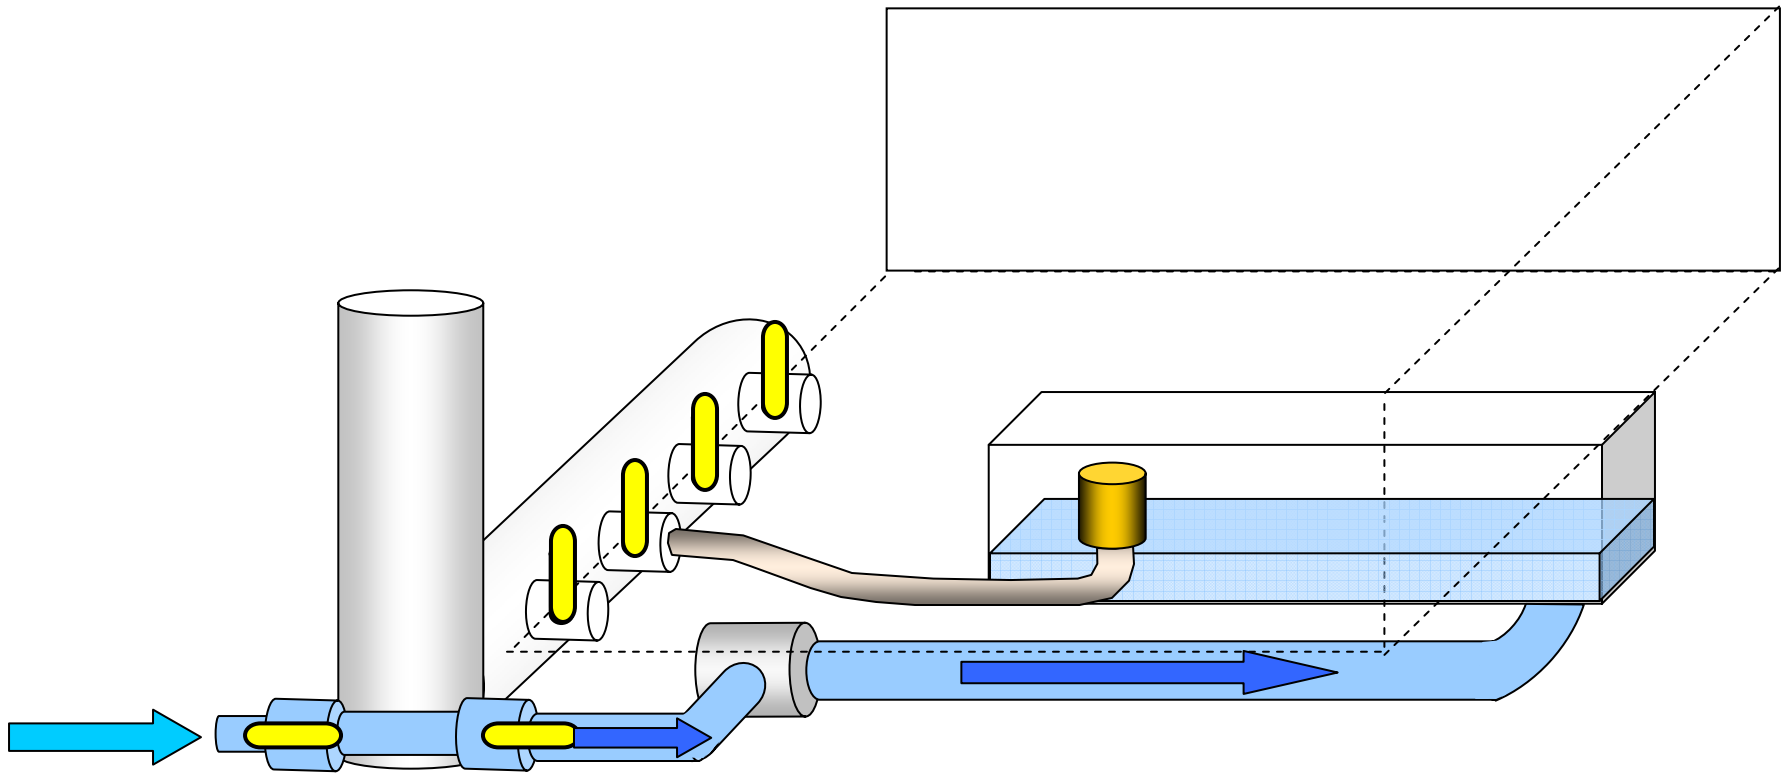


Filling the trainer with water

- **Should be filled to just below the shaft**

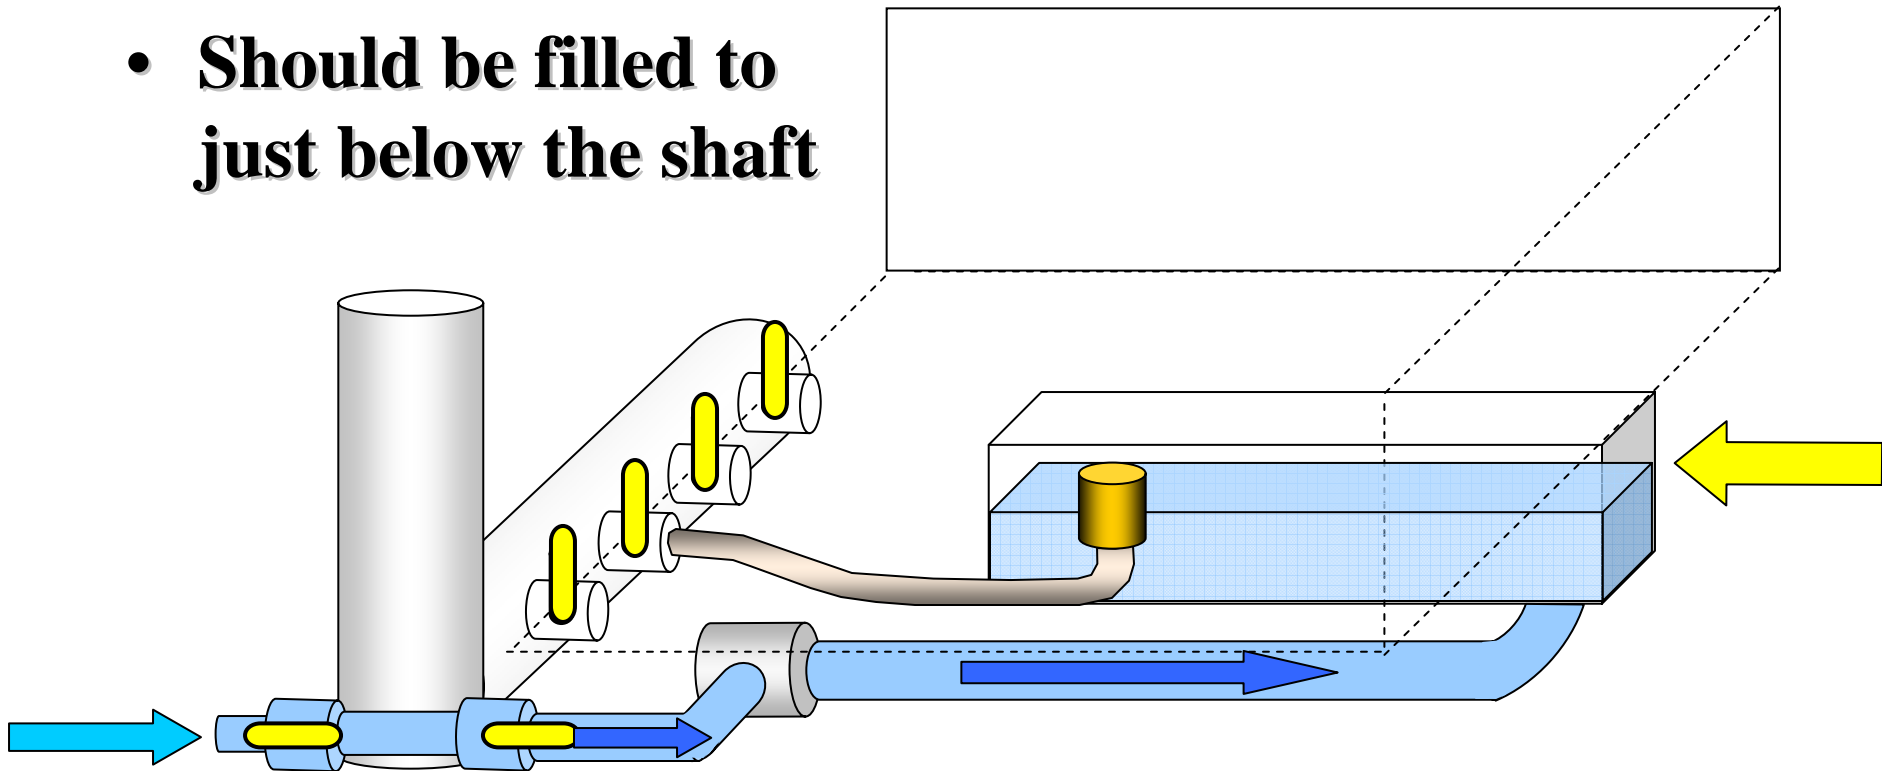


Filling the trainer with water

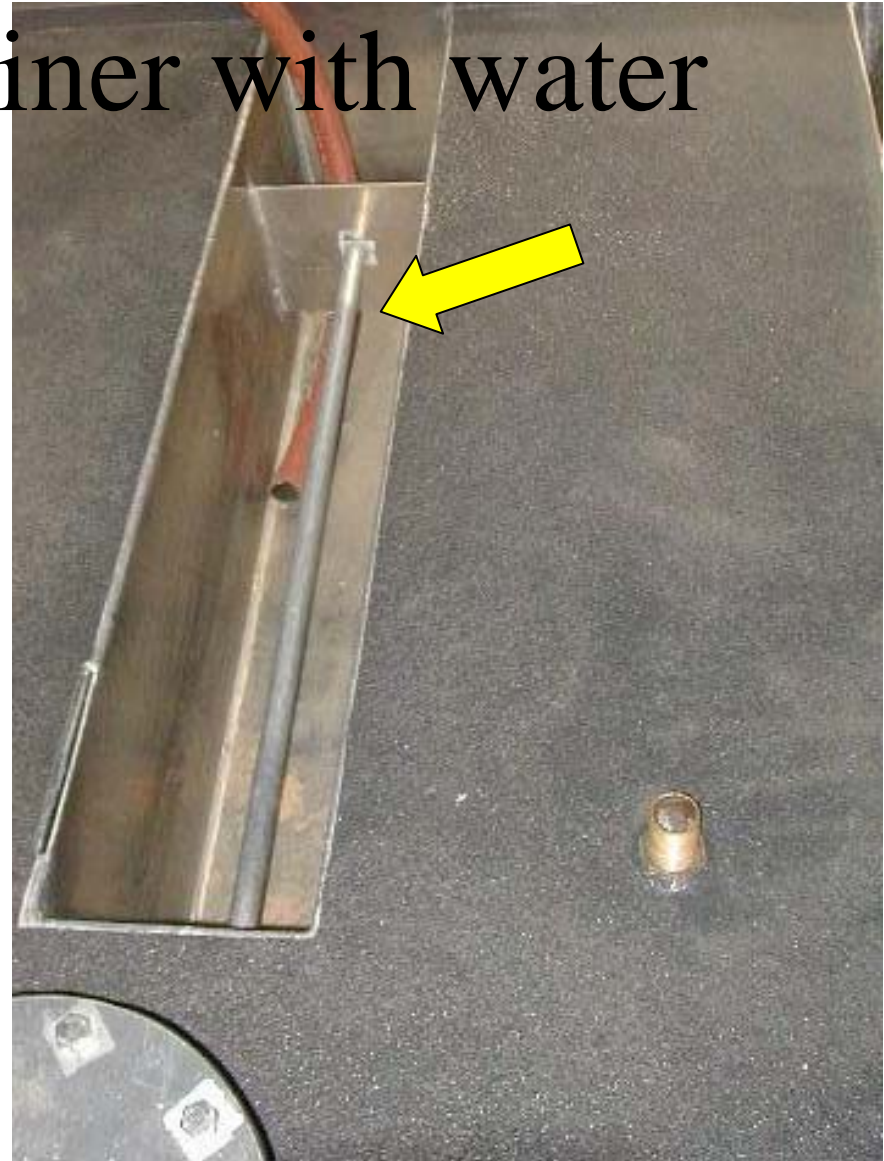


Filling the trainer with water

- **Secure pump valve**
 - Will fill head tank and manifold

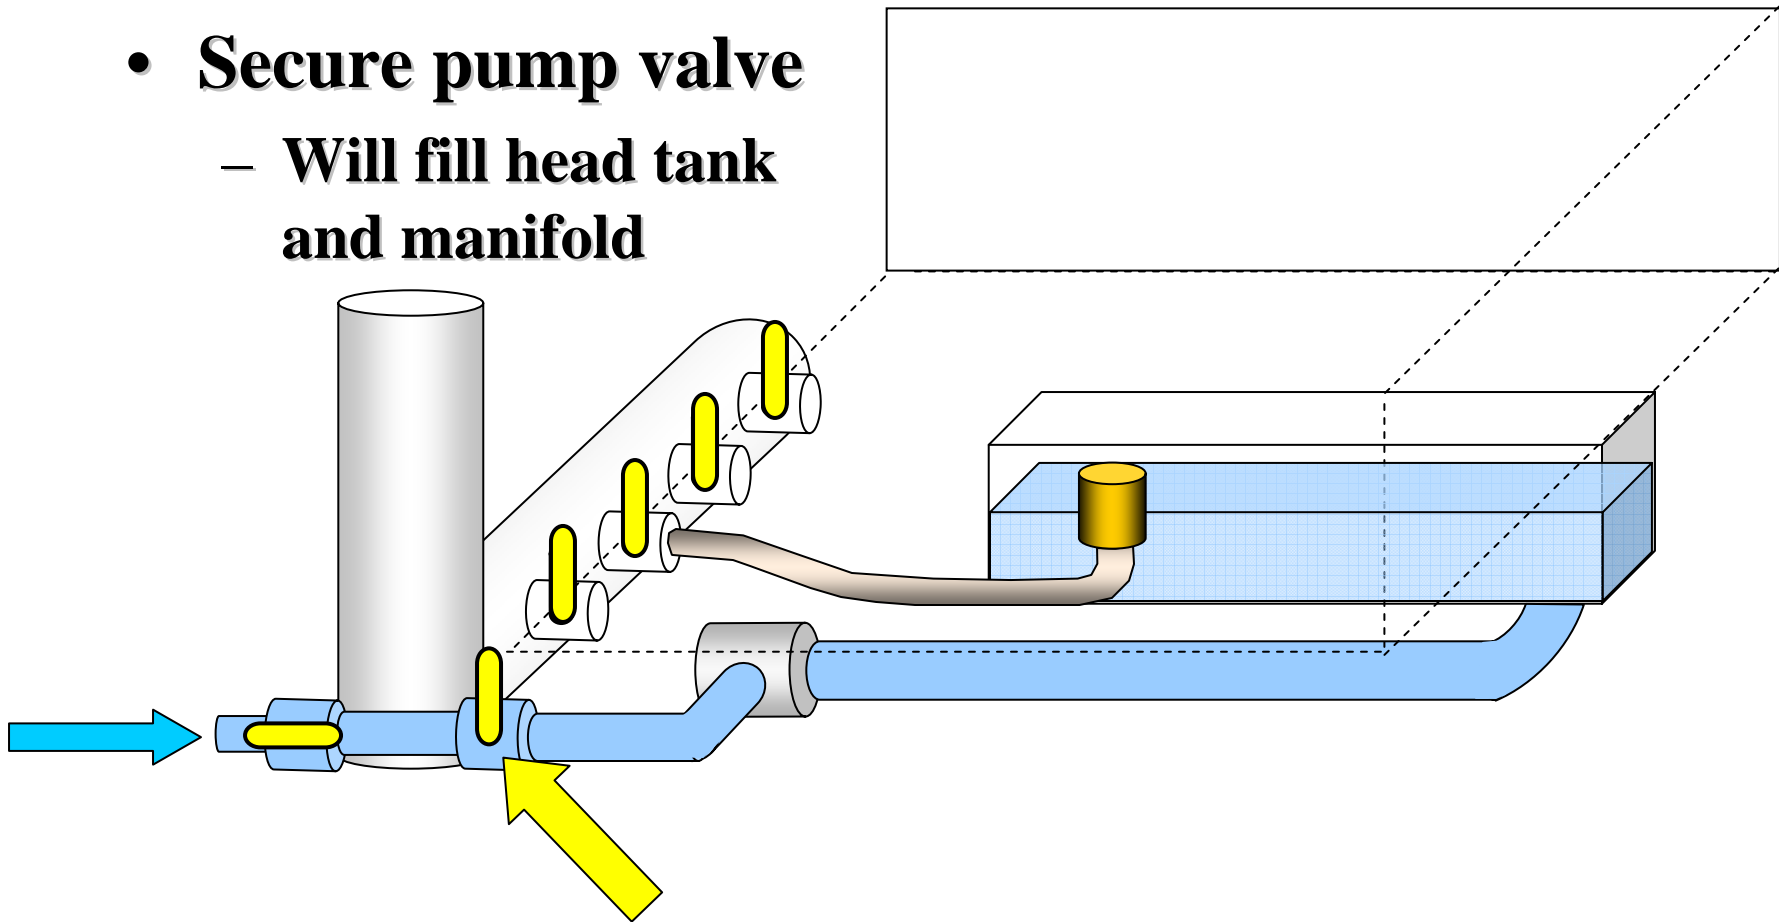


Filling the trainer with water

- **Next fill each of the stations through the manifold**

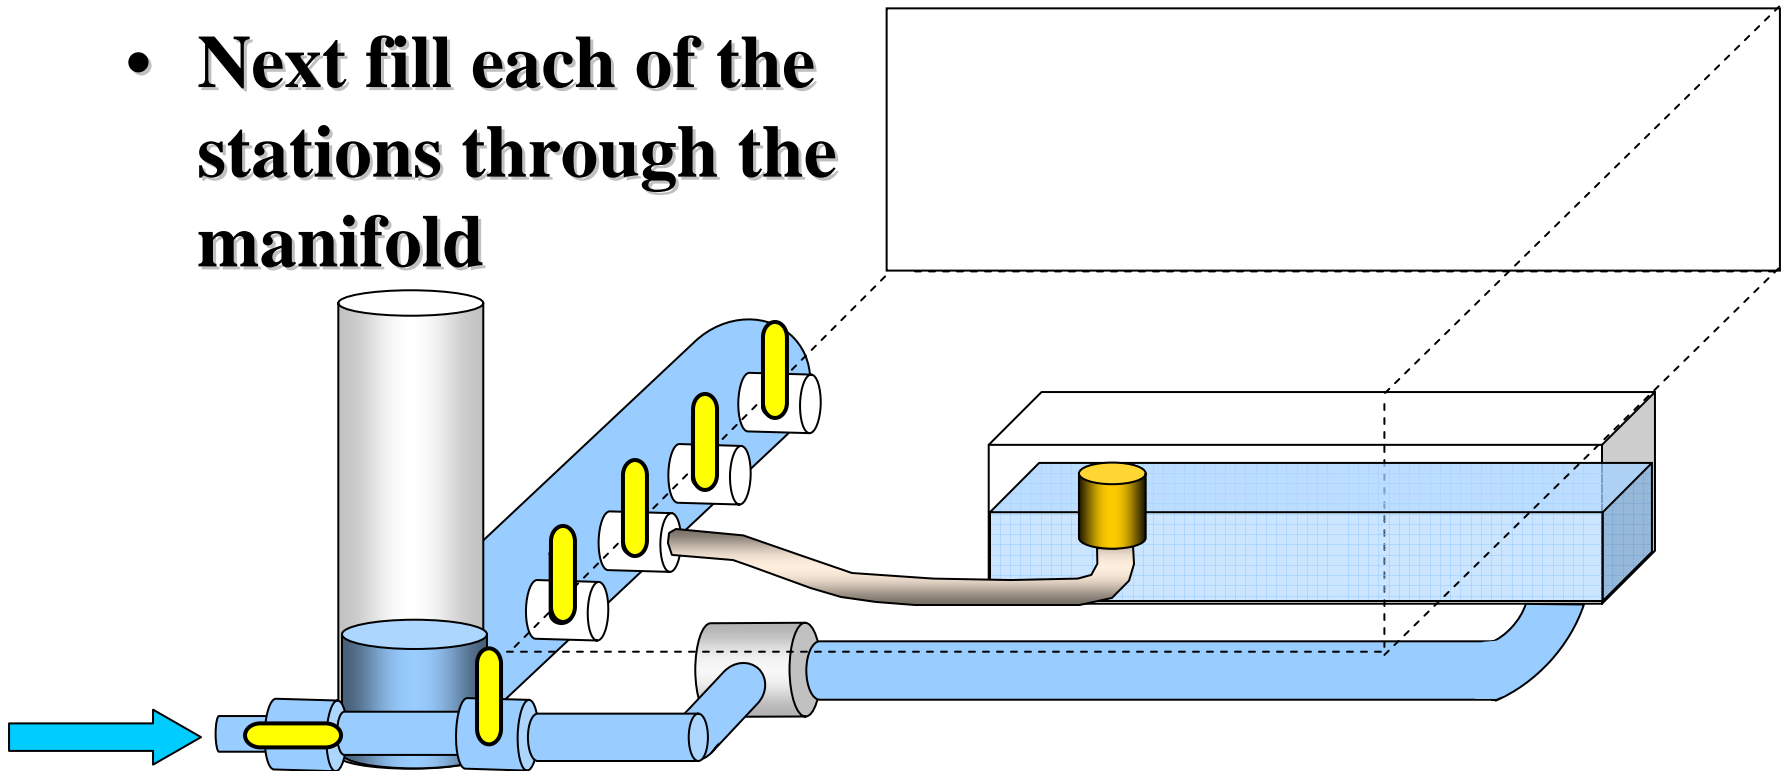


Filling the trainer with water

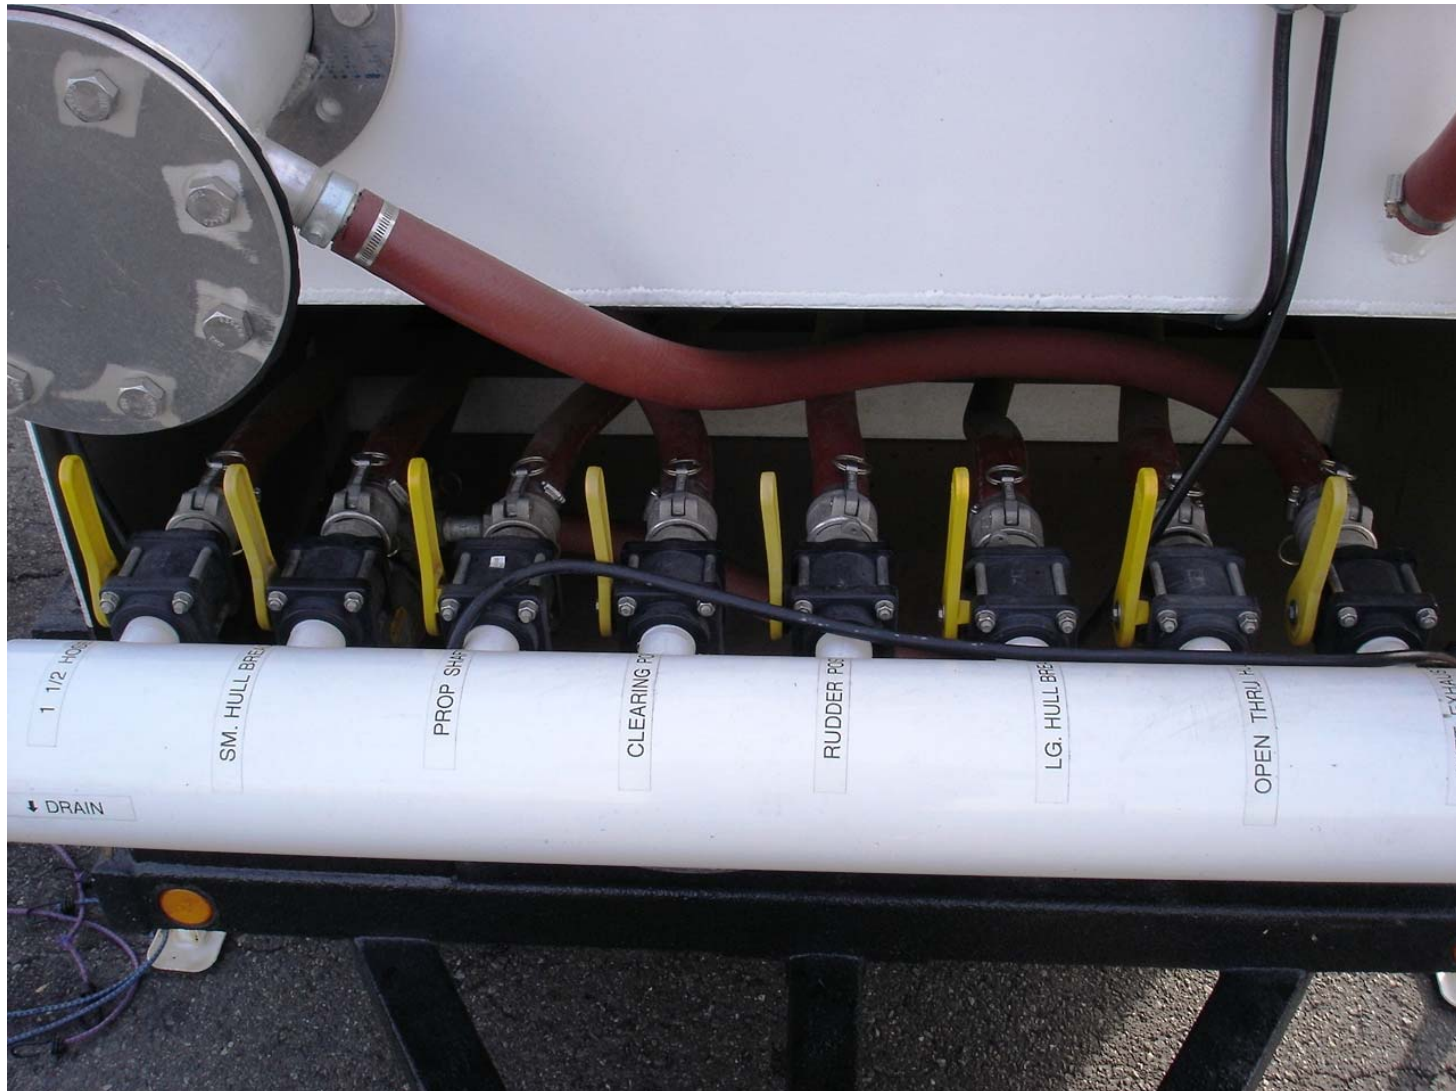


Filling the trainer with water

- **Open manifold valves one by one**
 - To fill each station

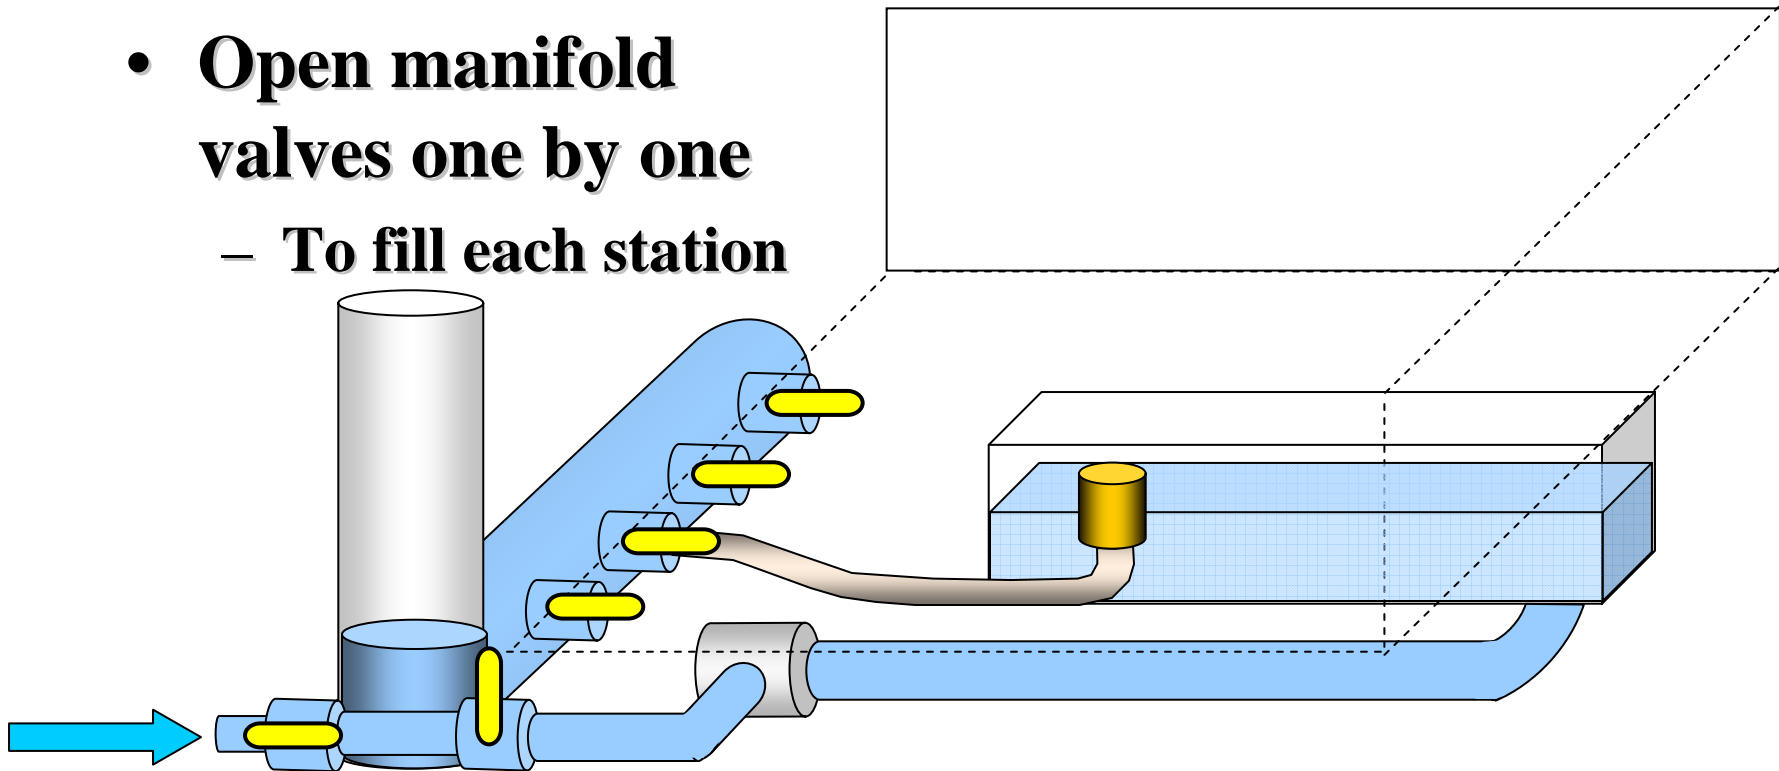

Filling the trainer with water

- **Secure each valve as the station is filled.**

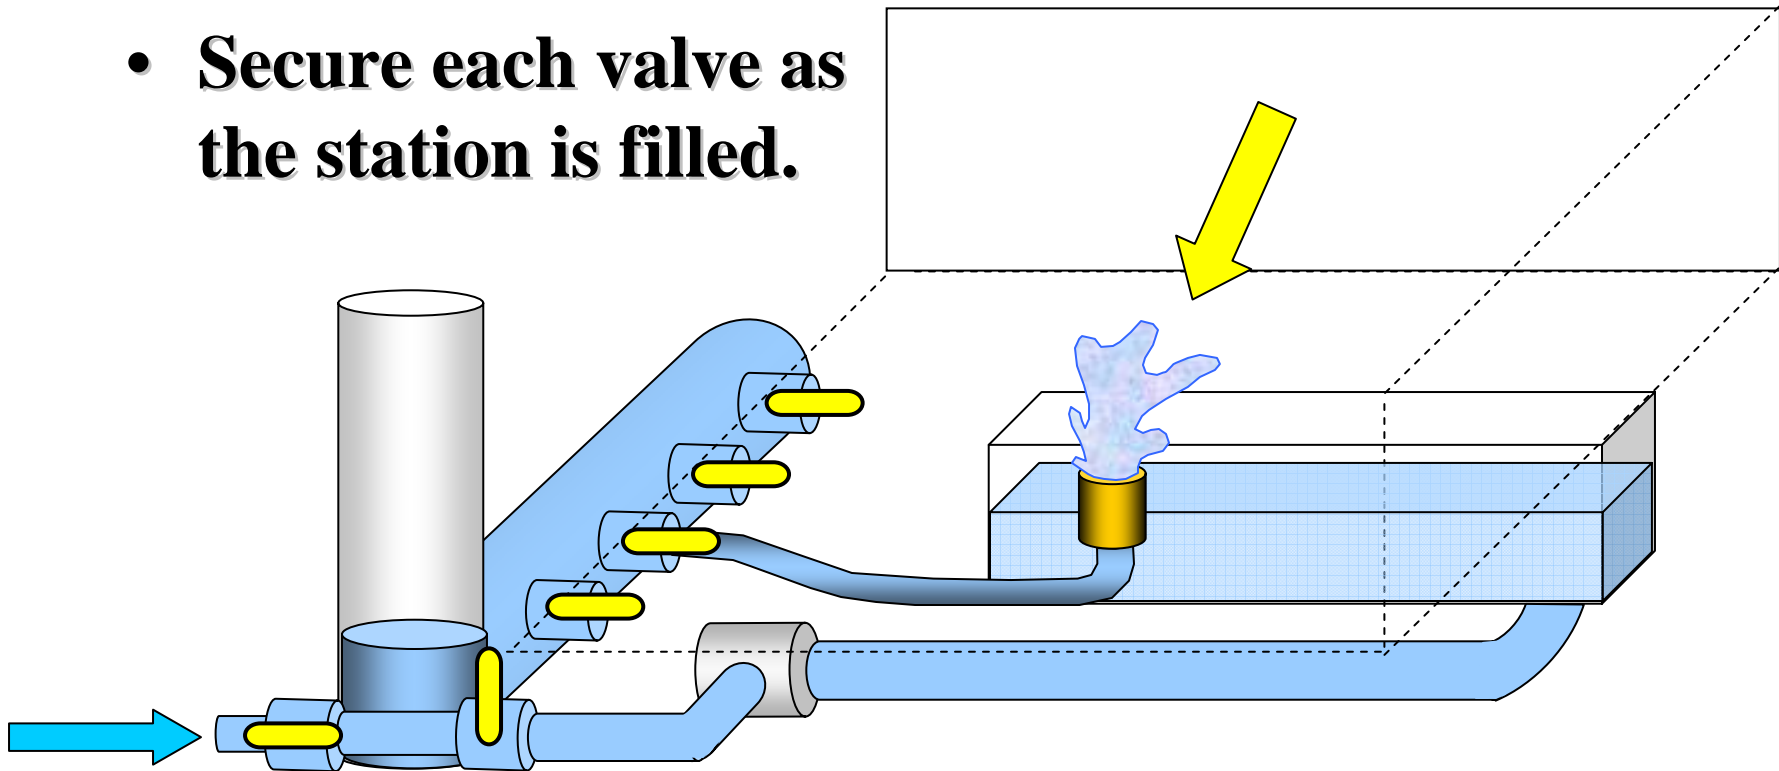


Filling the trainer with water




Filling the trainer with water

- **Secure each valve as the station is filled.**

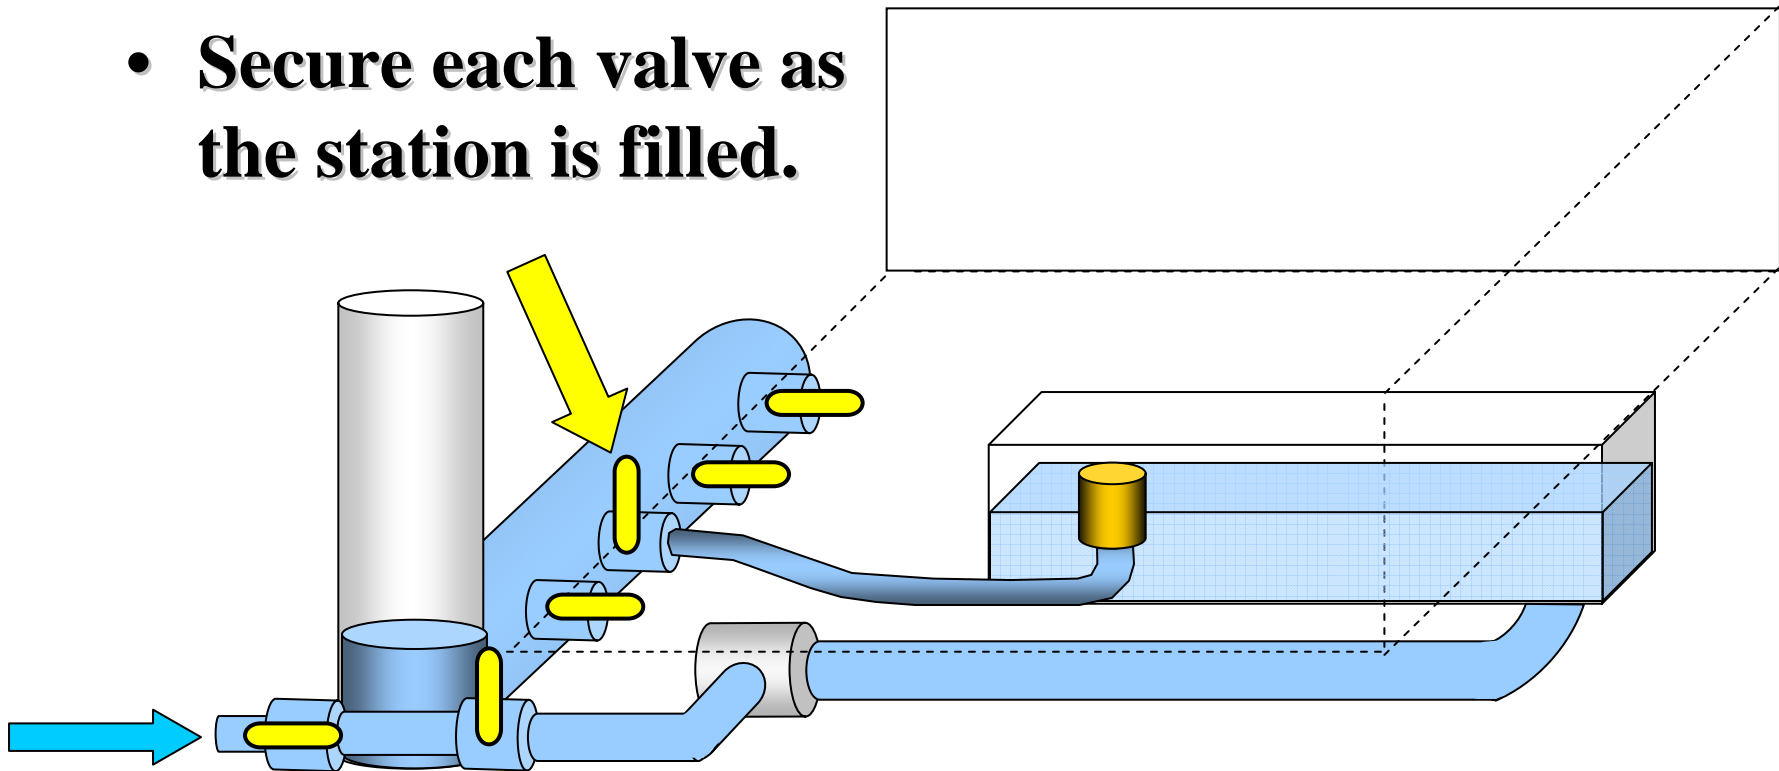


Filling the trainer with water

- **Ensure all manifold valves are secure when all stations are filled.**

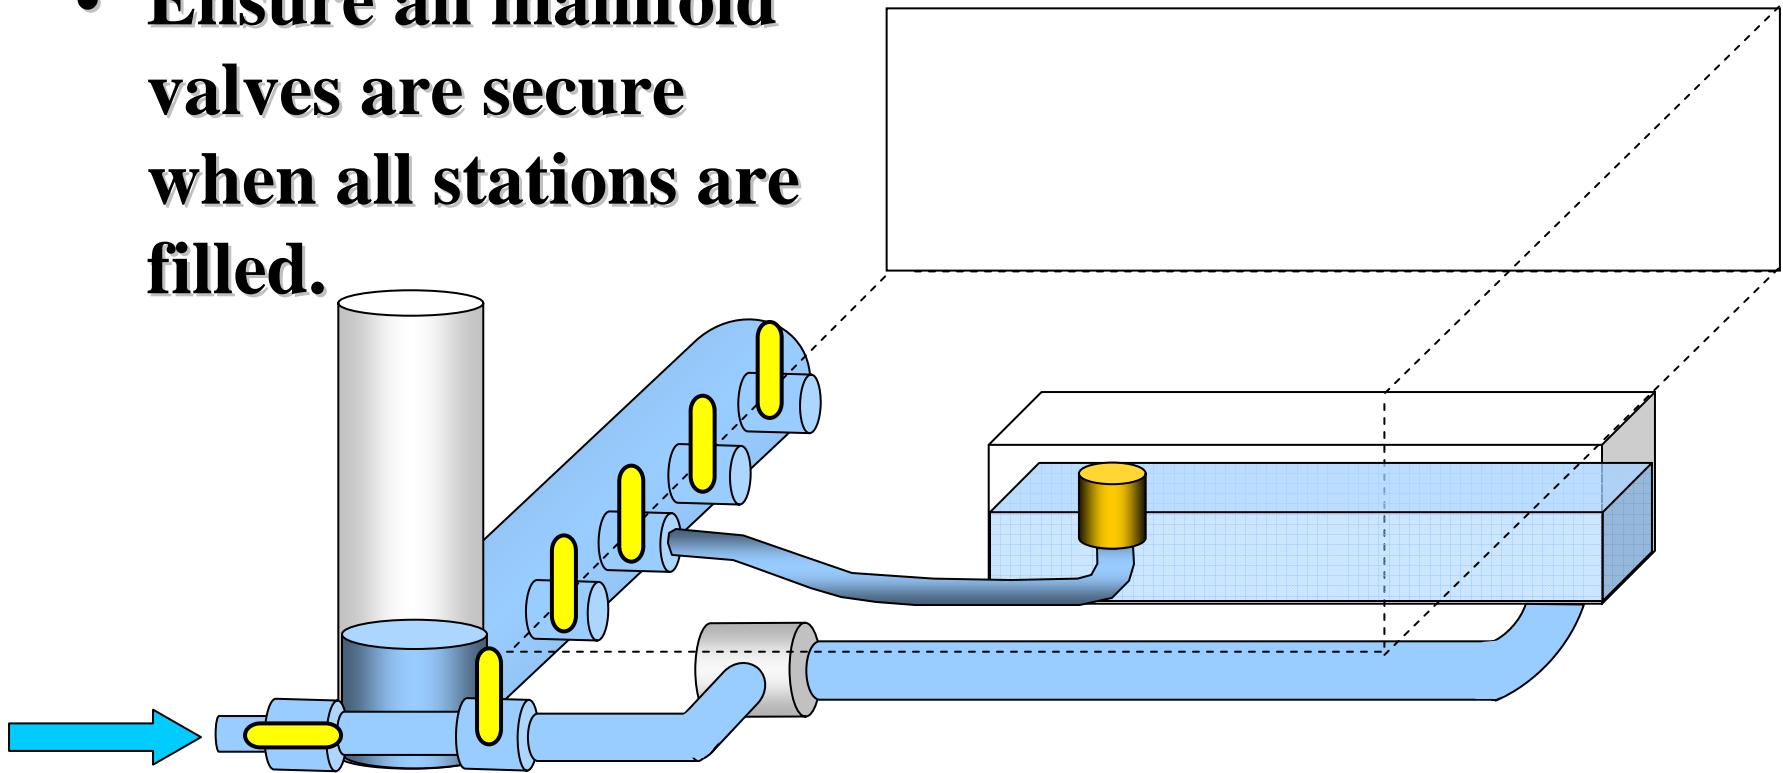

Filling the trainer with water

- **Finally the Head Tank will be filled.**

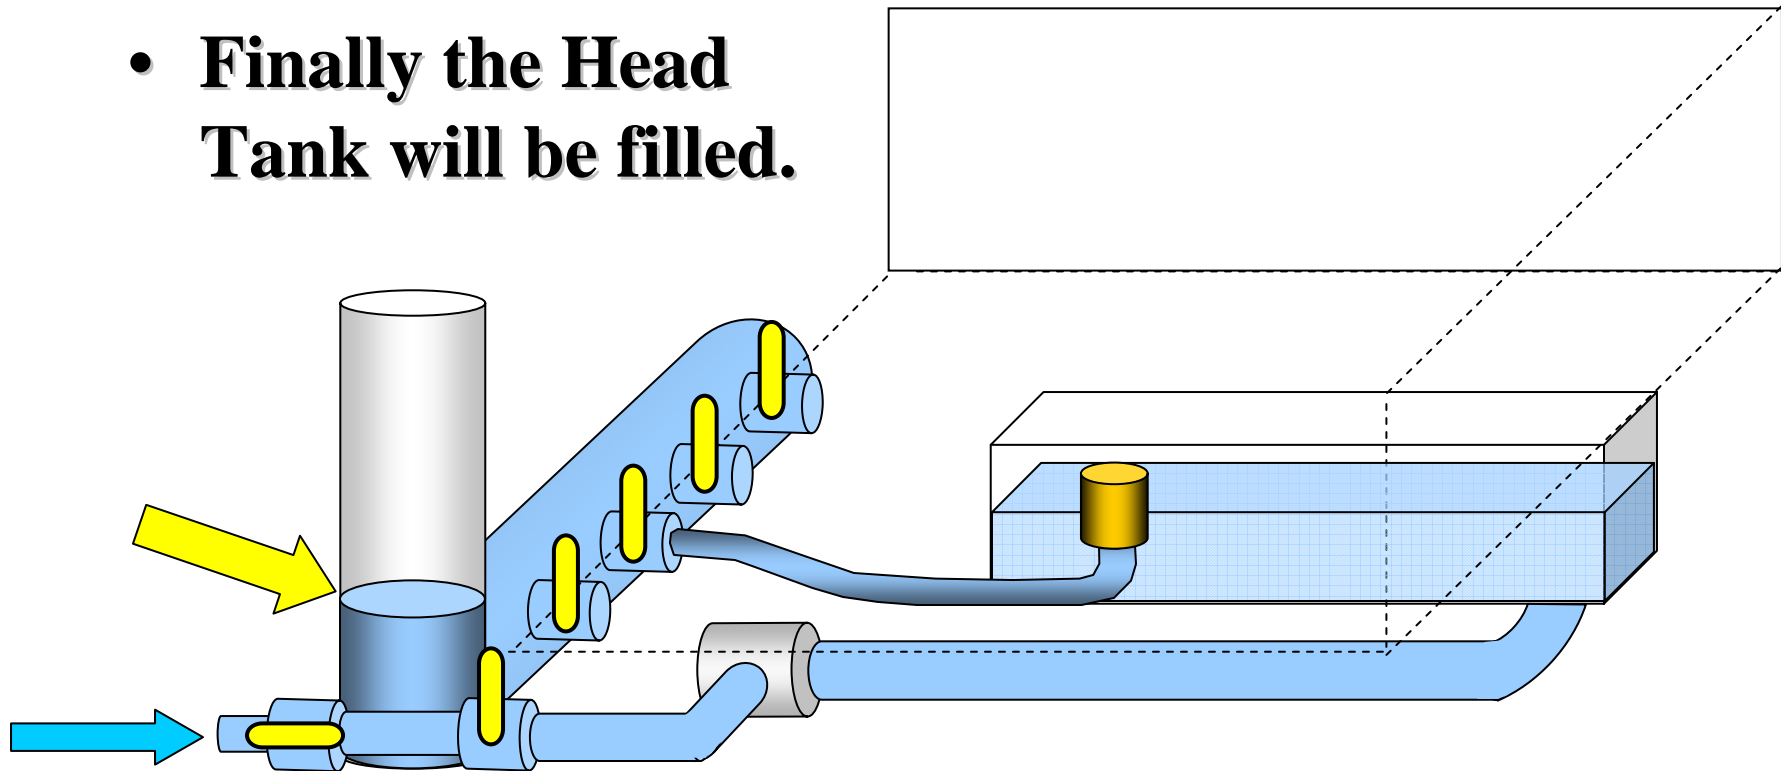


Filling the tank with water

- You can determine the level in the tank by using the site gauge.




Filling the trainer with water

- **Finally the Head Tank will be filled.**

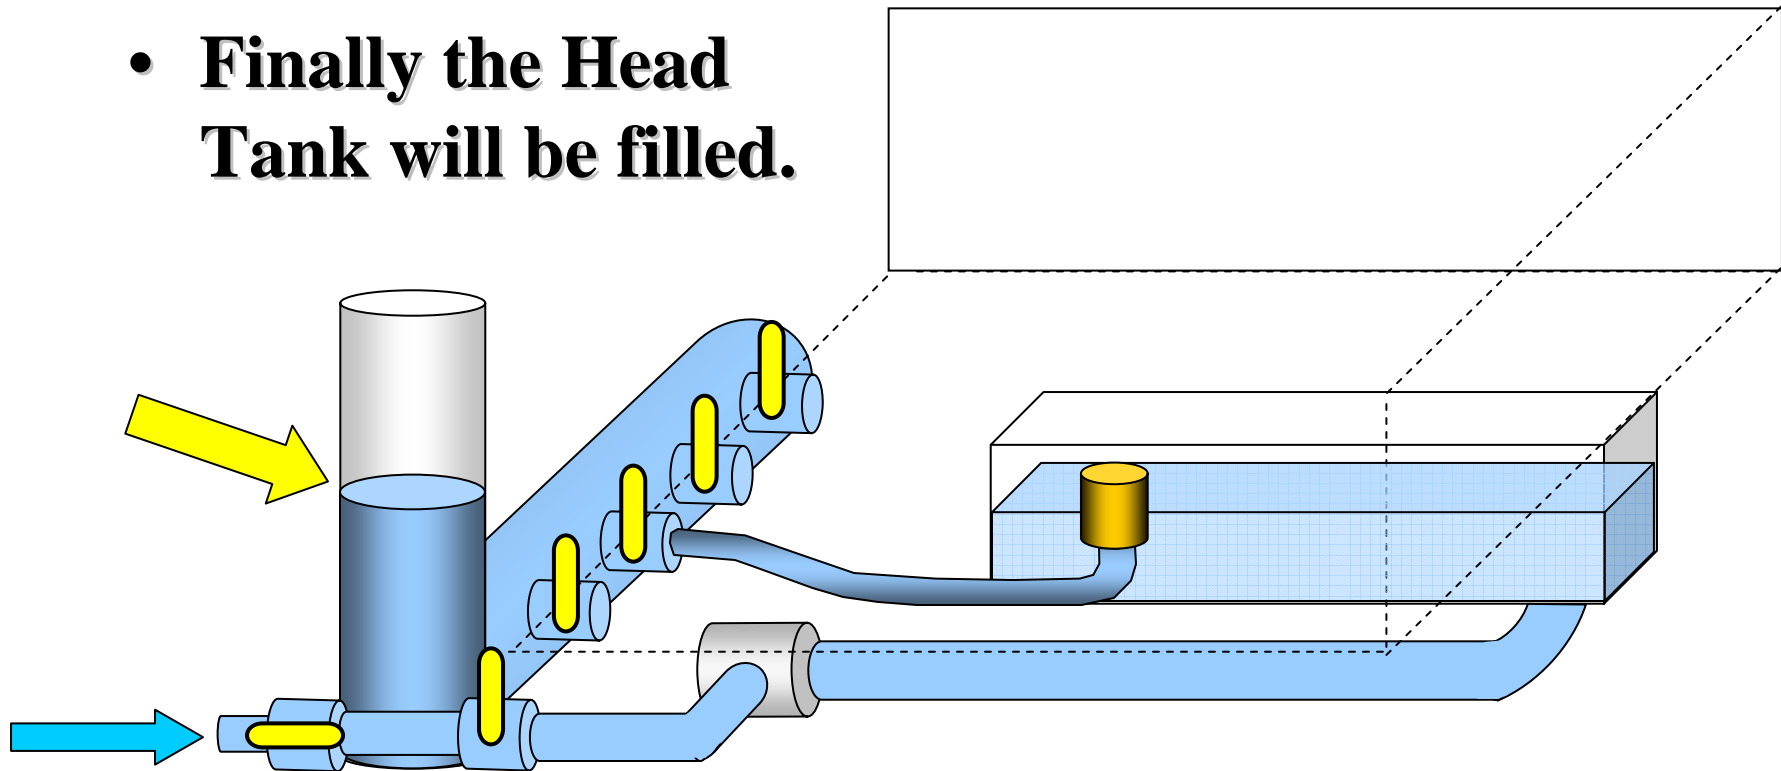


Filling the trainer with water

- **Finally the Head Tank will be filled.**

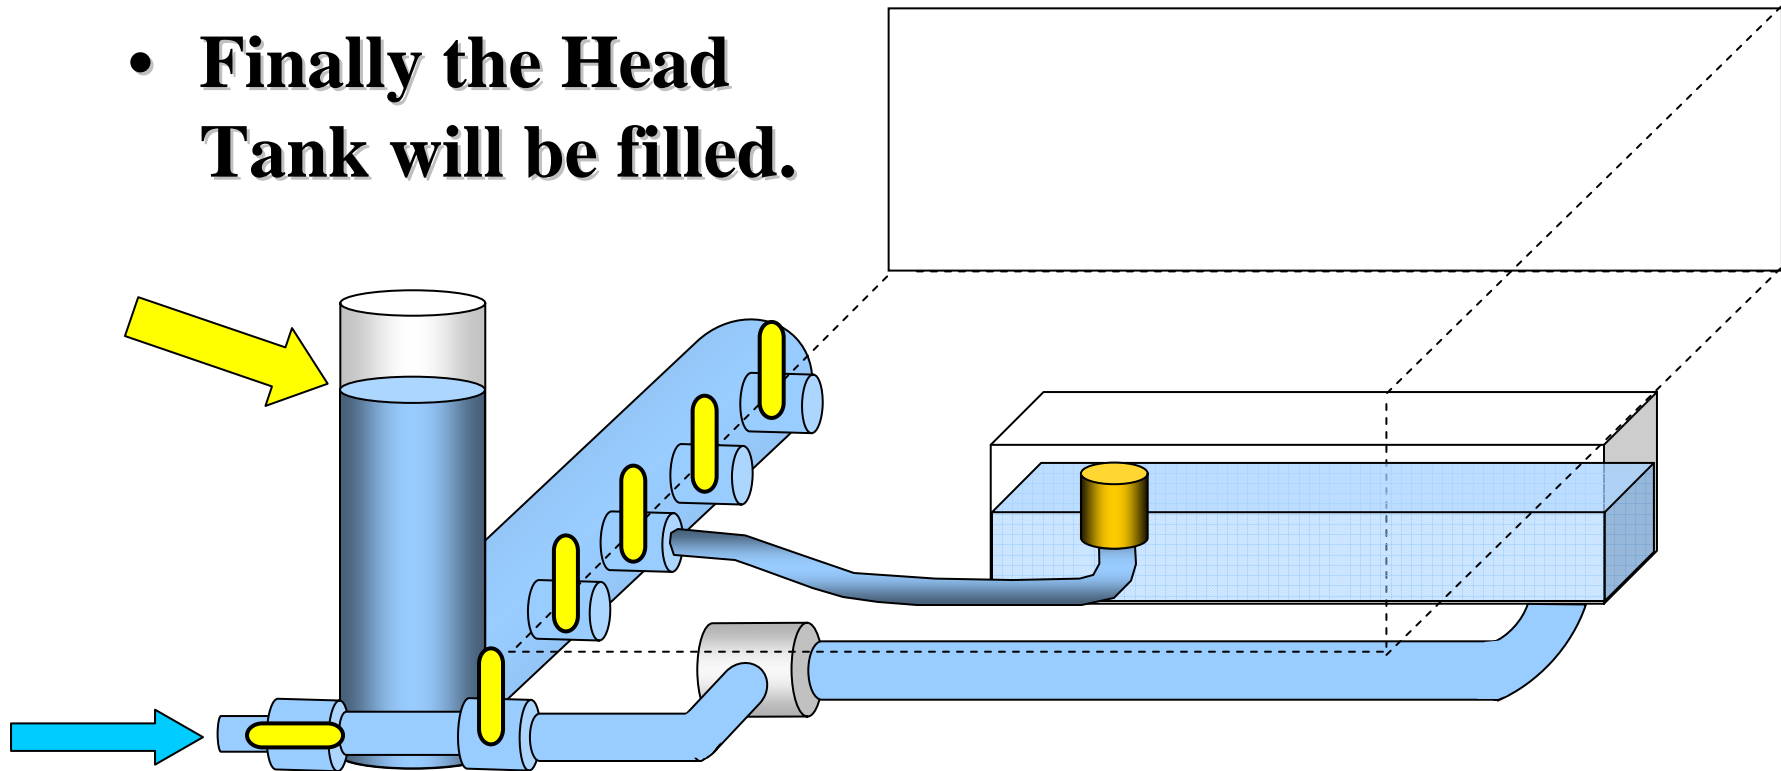


Filling the trainer with water

- **Finally the Head Tank will be filled.**

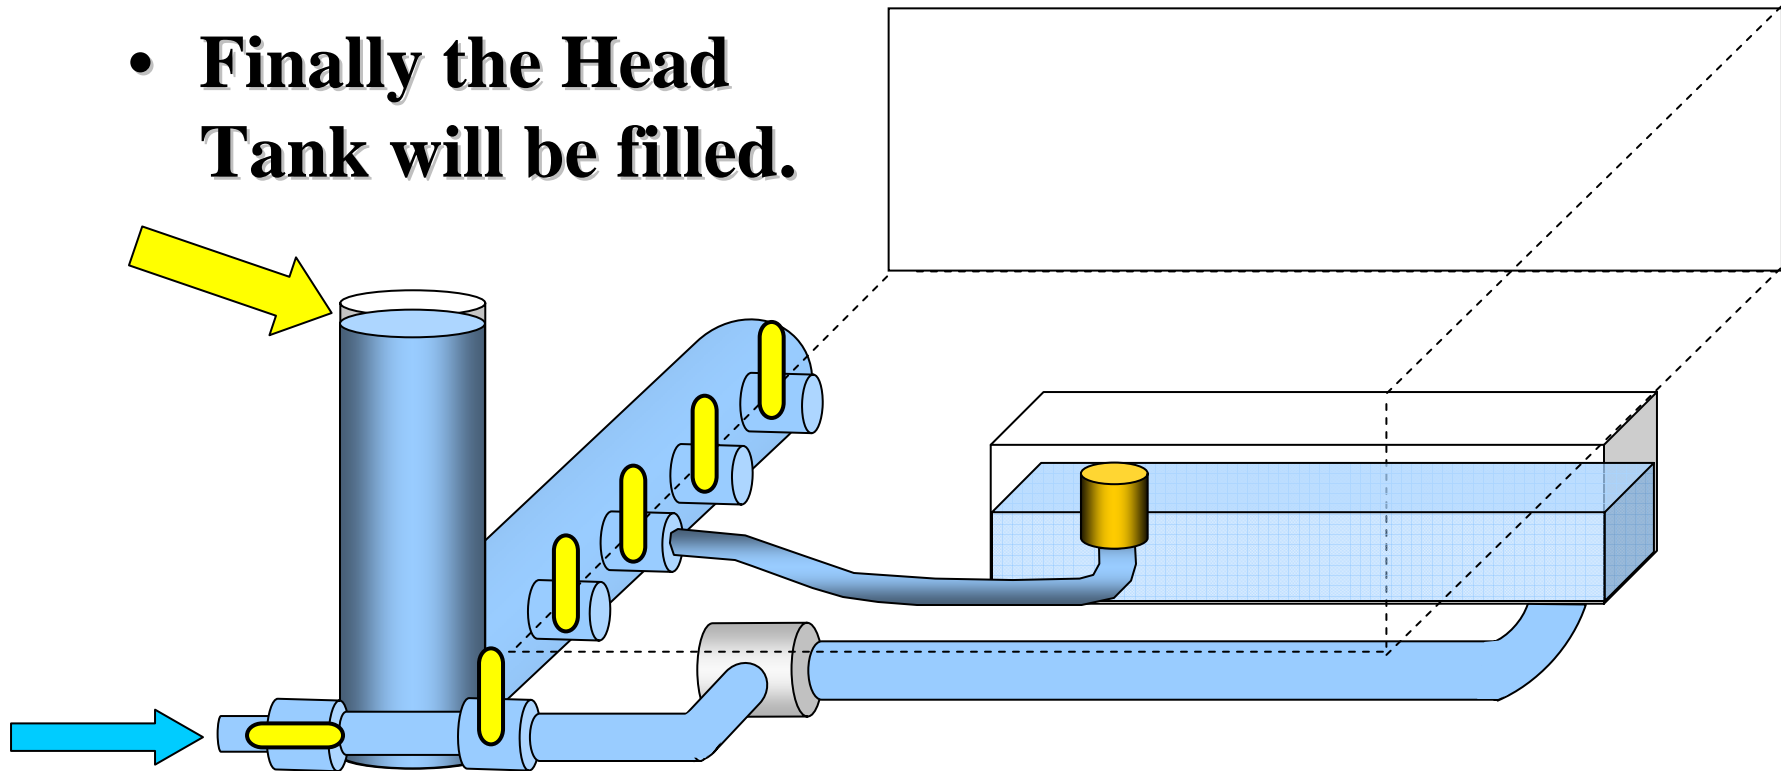


Filling the trainer with water

- **Secure the inlet valve**

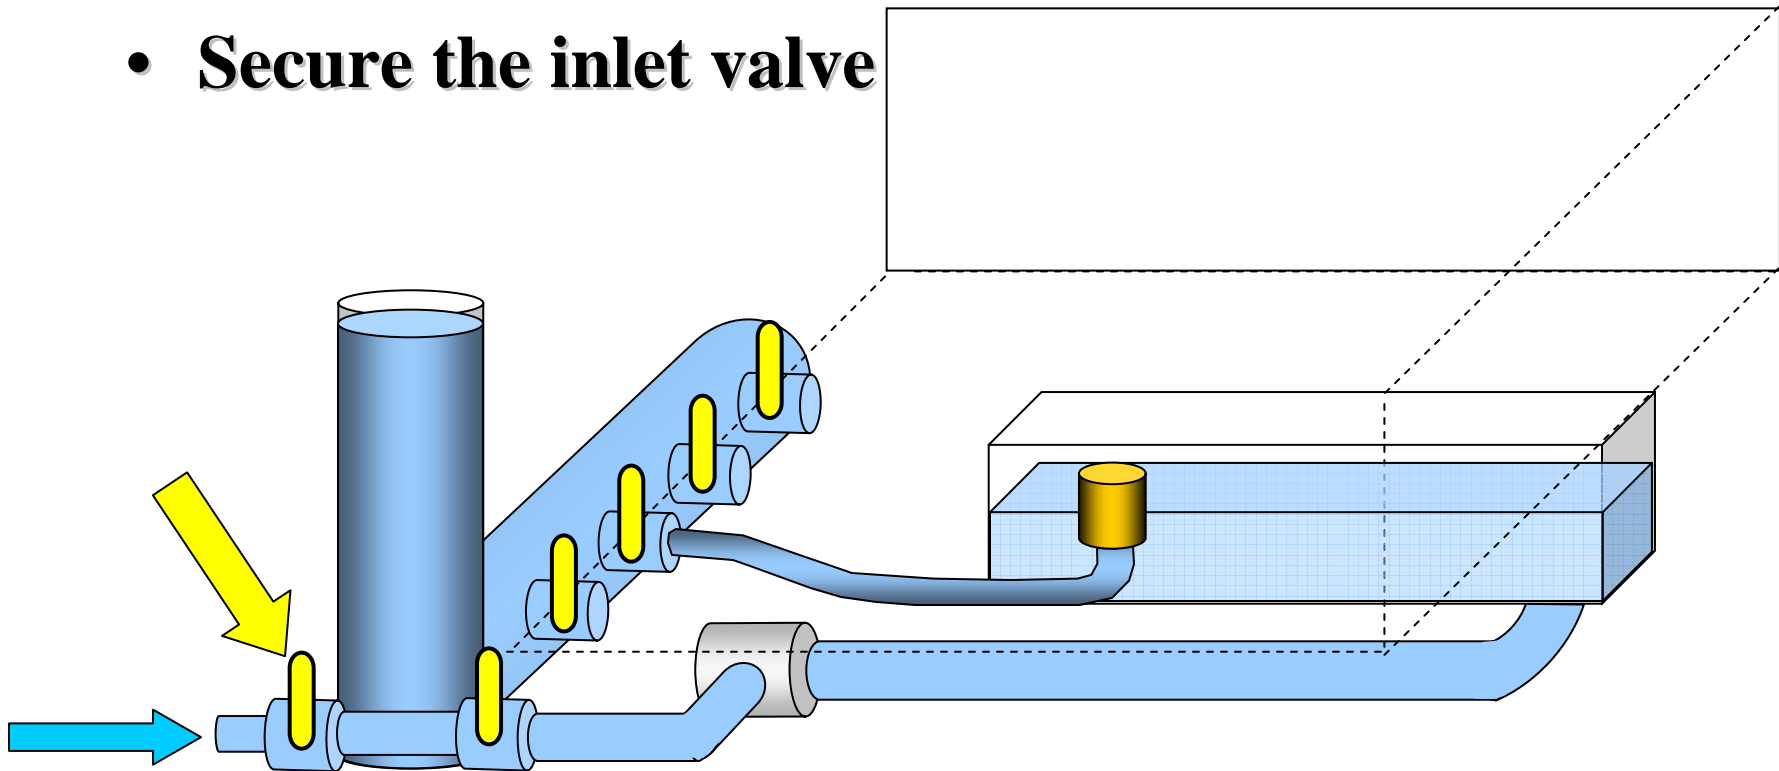

Filling the trainer with water

- **Note: the Head Tank has an overflow line that leads into the trainer**

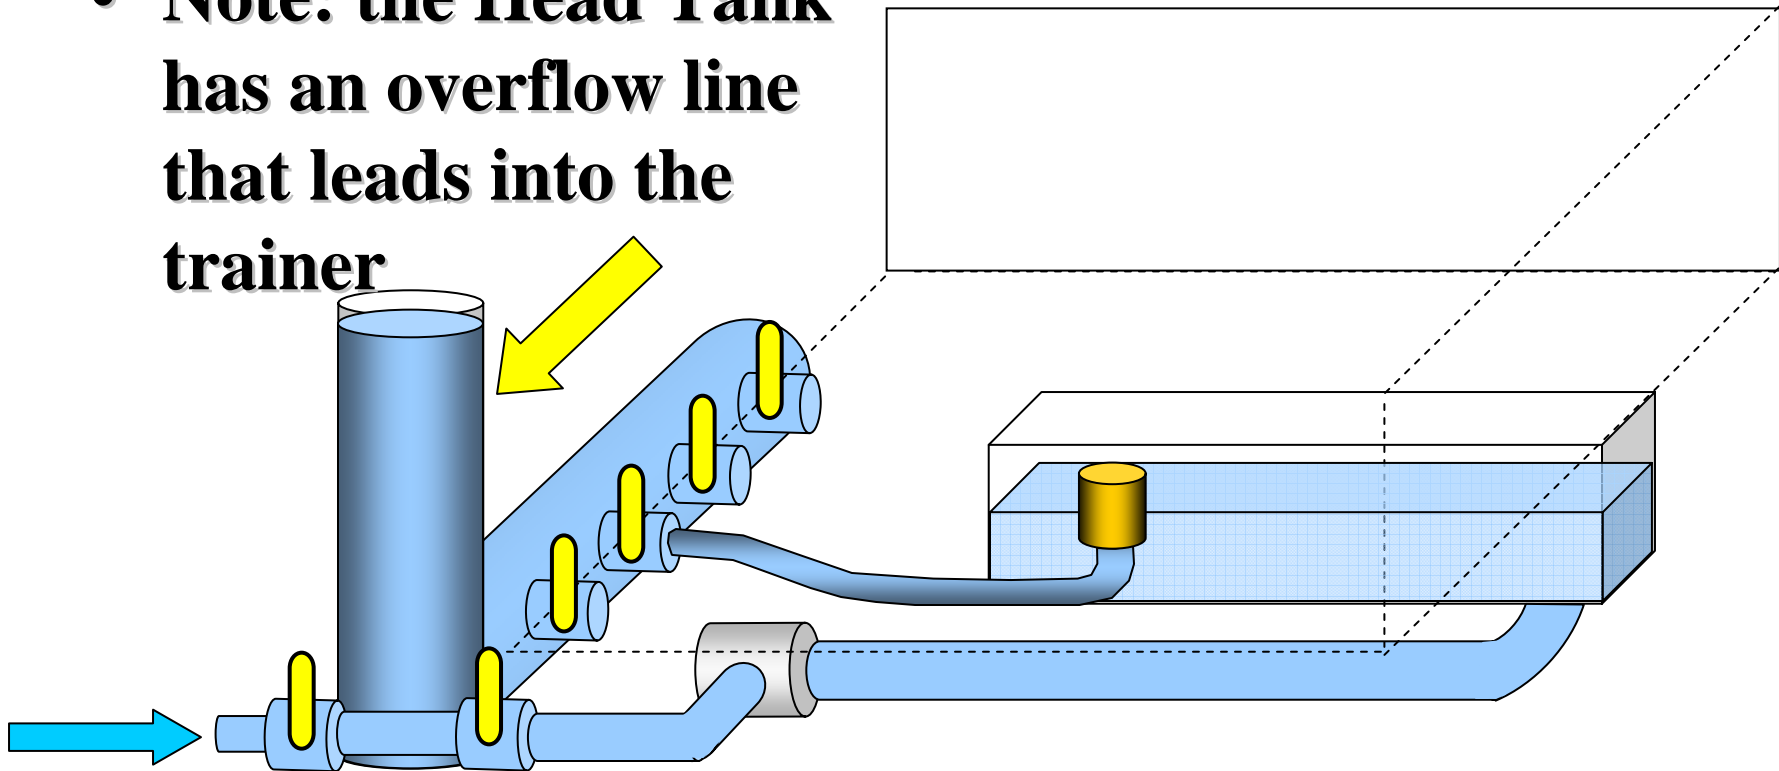

Filling the trainer with water

- **The water can now be disconnected**

